### 3.8 Child Lock Mode

Child-lock mode is designed to prevent undesired dispensing of hot or boiling water. To dispense hot or boiling water when child-lock mode is activated, press the button briefly and then hold the button (for about 3 seconds).

### To activate child-lock mode:

- Enter the settings menu by pressing the ibutton.
- Press the button alternately until the child-lock icon is displayed. To confirm, press the button.
- To select ON (to activate the child-lock mode) or OFF (child-lock mode is canceled), press the button, and then press the button.
- To exit the settings menu, press the 5/6 button.

# 4 Maintenance and Service

## 4.1 UV Lamp and Filter Replacement

To ensure a high quality of water it is very important to make sure the filter is replaced every 6 months or 2000 liters (according to the earliest) and to replace the UV lamp every 12 months.

- The replace filter/UV lamp notice will appear on the display 10 days prior to the required replacement date.
- Following replacement of the filter/UV lamp, the counter must be reset.

#### To reset the counter:

- Enter the settings menu by pressing the button.

  To select parts replacement, press the button alternately.

  To confirm, press the button.
- To select filter/UV, press the button, and then press the button.
- To set the new filter and reset the counter, press the button.
- To exit the settings menu, press the 5/6 button.

**Note:** If the UV lamp is inserted incorrectly or is not in order, water cannot be dispensed.

**Note:** instructions on how to replace the filter and the UV lamp are enclosed in the packaging of the products upon replacement or in our website: www.agamwater.com.







Filter replacement notice



UV lamp replacement notice



